



MOTO[™] VE465

User's Guide

HELLOMOTO

 
Thanks for purchasing the **MOTO™** VE465 CDMA wireless phone! It's an affordable phone with a sleek design that's sure to get attention.

Impressive Inside and Out — Sleek styling with all the right features, including rich imaging and multimedia. Take pictures and video in a snap with the 1.3 megapixel camera with 4x continuous digital zoom (see page 50). Listen to your favorite music with the digital music player, and watch your music come to life with stunning visual effects on the large display (see your *Getting Started Guide*).


Features at Your Fingertips — Without opening the flip you can activate the music player, turn on Bluetooth® power, or quickly mute your phone, using external control buttons (see your *Getting Started Guide*).


My Phone, My Way – It's your phone—make it that way. Customize your home screen with personal pictures, change wallpapers, and use your favorite song as your ringtone (see your *Getting Started Guide*).

Here's a quick anatomy lesson.

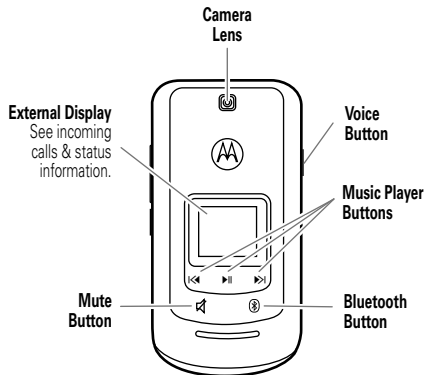


Home Screen

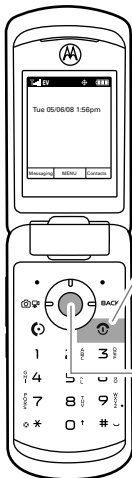 



① Press and hold the **Power Key**  for a few seconds, or until the display lights up, to turn on your phone.

 ② Press the Center Key () to open the **Main Menu**.

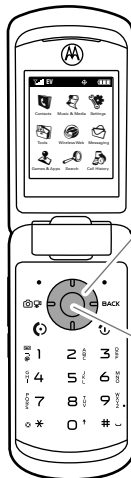Main Menu



③ Press the Navigation Key () **up, down, left,** or **right** to highlight a menu feature.

④ Press the Center Key () to select it.

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196
www.hellomoto.com

Note: Do not ship your phone to the above address. If you need to return your phone for repairs, replacement, or warranty service, please contact the Motorola Customer Support Center at:

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide, are based upon the latest available information and believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Microsoft and Windows are registered trademarks of Microsoft Corporation. All other product or service names are the property of their respective owners.

© 2009 Motorola, Inc. All rights reserved.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual Number: 68000201502-B

contents

menu map	7	manage memory	23	restore phone	31
Use and Care	9	TTY operation	24	AGPS & your location.	31
get started	10	airplane mode	25	AGPS limitations & tips	32
about this guide	10	view your phone number ...	26	calls	33
battery	11	tips & tricks	27	redial a number	33
basics	15	personalize	28	automatic retry	33
home screen	15	Quick Find Powered		turn off a call alert	33
external display	18	by i QiX™	28	recent calls	34
adjust volume	18	voice readout	29	return a missed call	34
handsfree	18	key volumes	29	speed dial	35
lock & unlock phone	19	alert reminders	29	emergency calls	35
keypad lock	20	ring & vibrate	29	AGPS during an	
lock side keys & external control		answer options	30	emergency call	36
buttons	21	backlight	30	attach number	37
lock application	22	brightness	30	insert special characters ...	37
codes	22	banner	30	international calls	37
if you forget a code	22	menu language	30	hearing aid	38
		clock format	30	in-call options	38

call times	38	tools	57	Export Law	83
more calling features	39	voice recognition	57	Recycling Information	83
text entry	40	contacts	58	Perchlorate Label	83
messages	42	network	61	Privacy and Data Security	84
send messages	42	personal organizer	61	Driving Safety	84
receive messages	43	connections	64	index	86
voicemail	44	cable connections	64		
more messaging features	45	Bluetooth® connections	64		
entertainment	47	service & repairs	70		
play music	47	SAR Data	71		
get music	47	Safety Information	74		
TELUS mobile radio™	50	Industry Canada Notice	77		
camera & camcorder	50	FCC Notice	77		
view pictures	53	Warranty	78		
play videos	53	Hearing Aids	81		
launch browser	55	WHO Information	82		
manage sounds	56	Registration	82		

menu map

main menu



Contacts



Music & Media

- TELUS mobile music
- TELUS mobile radio
- Ringtones & Sounds
- Camera
- Pictures
- Video Camera
- Videos
- Storage Device Tools



Settings

- (see next page)



Tools

- Bluetooth
- Voice Commands
- Datebook
- Alarm Clock
- World Clock
- Calculator
- Notepad



Wireless Web



Messaging

- Voicemail
- Create Message
- Inbox
- TELUS mobile email
- Outbox
- Drafts
- View Online Album



Games & Apps



Search



Call History

This is the standard main menu layout. **Your phone's menu may be different.**

settings menu

- **Sounds**

- Call Ringtone
- Message Ringtone
- Voicemail Ringtone
- Ring & Vibrate
- Alert Reminders
- Service Alerts
- Power On/Off
- Voice Readout
- Keypad Volume
- Volume Sidekeys

- **Display**

- Banner
- Backlight
- Brightness
- Wallpaper
- Clock Format

- **USB Mode**

- Mass Storage
- Modem/COM

- **Phone**

- Airplane Mode
- Shortcuts
- Language
- Location
- Security
- Network Selection
- Active Line
- Text Learning
- Quick Find

- **Call**

- Answer Options
- Auto Retry
- TTY Setup
- One Touch Dial
- Int'l Dialing
- DTMF Tones
- Hearing Aid
- Auto Prepend '1'

- **Storage Device**

- Save Options *
- Phone Memory
- Memory Card *

- **Phone Info**

- **App Settings**

* available only when optional memory card installed

Use and Care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the phone.



extreme heat or cold

Avoid temperatures below -10°C/14°F or above 45°C/113°F.



microwaves

Don't try to dry your phone in a microwave oven.



dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



the ground

Don't drop your phone.

get started

CAUTION: Before using the phone for the first time, read the *Important Safety and Legal Information* included in the gray-edged pages at the back of this guide.






about this guide

This guide shows how to locate a menu feature as follows:

Find it:  >  Call History > Dialed Calls

This means that, from the home screen:

- 1 Press the *center key*  to open the menu.

- 2 Press the *navigation key*  to scroll to  Call History, and press  to select it.
- 3 Press the *navigation key*  to scroll to **Dialed Calls**, and press  to select it.

symbols



This means a feature is network/subsription dependent and may not be available in all areas. Contact your service provider for more information.



This means a feature requires an optional accessory.

battery

install & charge battery

See your *Getting Started Guide* for instructions on installing and charging the battery.

Notes for charging your phone's battery:

- When charging your battery, keep it near room temperature. Never expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F) when charging.
- New batteries are not fully charged.
- New batteries or batteries stored for a long time may take more time to charge.
- Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging.

conserve battery charge

Using certain features can quickly deplete your battery's charge. **These features can include downloading music, replaying video clips, and using Bluetooth® wireless connections.**

You can conserve your battery's charge by doing the following:

- Turn Bluetooth power off when not in use (see page 65).
- Turn off wallpaper (see your *Getting Started Guide*).
- Reduce backlight display time (see your *Getting Started Guide*).

battery use & safety

IMPORTANT: HANDLE AND STORE BATTERIES

PROPERLY TO AVOID INJURY OR DAMAGE. Most

battery issues arise from improper handling of batteries, and particularly from the continued use of damaged batteries.

DON'Ts

- **Don't disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery.**
- **Don't let the phone or battery come in contact with water.** Water can get into the phone's circuits, leading to corrosion. If the phone and/or battery get wet, have them checked by your carrier or contact Motorola even if they appear to be working properly.

- **Don't allow the battery to touch metal objects.** If metal objects, such as jewelry, stay in prolonged contact with the battery contact points, the battery could become very hot.
- **Don't place your battery near a heat source.** Excessive heat can damage the phone or the battery. High temperatures can cause the battery to swell, leak, or malfunction. Therefore:

- Do **not** dry a wet or damp battery with an appliance or heat source, such as a hair dryer or microwave oven.
- Avoid leaving your phone in your car in high temperatures.

DOs

- **Do avoid dropping the battery or phone.** Dropping these items, especially on a hard surface, can potentially cause damage.

- **Do contact your service provider or Motorola if your phone or battery has been damaged from dropping or high temperatures.**

IMPORTANT: USE MOTOROLA ORIGINAL PRODUCTS FOR QUALITY ASSURANCE AND SAFEGUARDS.

To aid consumers in identifying authentic Motorola batteries from non-original or counterfeit batteries (that may not have adequate safety protection), Motorola provides holograms on its batteries. Consumers should confirm that any battery they purchase has a “Motorola Original” hologram.

Motorola recommends you always use Motorola-branded batteries and chargers. Motorola mobile devices are designed to work with Motorola batteries. If you see a message on your display such as **Invalid Battery** or **Unable to Charge**, take the following steps:

- Remove the battery and inspect it to confirm that it has a “Motorola Original” hologram;

- If there is no hologram, the battery is not a Motorola battery;
- If there is a hologram, replace the battery and retry charging it;
- If the message remains, contact a Motorola Authorized Service Center.

Important: Motorola’s warranty does not cover damage to the phone caused by non-Motorola batteries and/or chargers.

Warning: Use of a non-Motorola battery or charger may present a risk of fire, explosion, leakage, or other hazard.

PROPER AND SAFE BATTERY DISPOSAL AND RECYCLING

Proper battery disposal is not only important for safety, it benefits the environment. Consumers may recycle their used batteries in many retail or service provider

locations. Additional information on proper disposal and recycling may be found on the Web:

- www.motorola.com/recycling
- www.rbrc.org/call2recycle/ (in English only)

Disposal: Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling center or national recycling organizations for more information on how to dispose of batteries.

 


Warning: Never dispose of batteries in a fire because they may explode.

basics

home screen



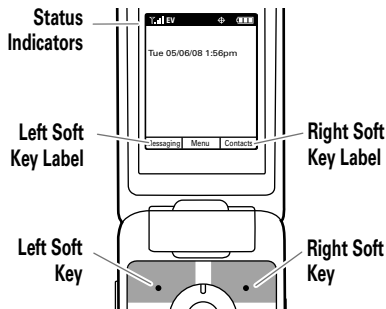

Your phone shows the *home screen* when you are not on a call or using the menu.














 

Note: Your home screen might look different from the one shown, depending on your service provider.


 

 



Soft key labels in the home screen show the current soft key functions.








Indicators at the top of your phone's display provide important status information, such as incoming calls, missed messages, and other conditions. Here are the indicators you may see:

indicator	
	Signal Strength —Vertical bars show the strength of the network connection.
	Digital —Phone is in a CDMA digital coverage area.
	EVDO Coverage —Phone is in an EVDO (fast broadband internet service) coverage area. 

indicator	
	1xRTT —Phone is in a 1xRTT coverage area. (1xRTT offers higher voice and data transmission than CDMA.)
	Airplane Mode —Phone's features that require voice or data transmission are turned off (see page 25).
	Roaming —Phone is in a digital coverage area and is roaming off network.
	SSL —Indicates phone is using Secure Sockets Layer (SSL) secure data transmission.
	Data Call —(Arrows colored blue) Shows during an active data call.
	Dormant —(Arrows colored white) Indicates phone is dormant and PPP session is active.


indicator	
	No Service —Phone is in area with no service coverage.
	VR Active —Indicates the phone's Voice Recognition feature is active (see page 57).
	VR Listening —Indicates the phone's Voice Recognition feature is waiting for a voice command (see page 57).
	TTY —Phone is in TTY mode (see page 24).
	911 Only —Location is set to Off (E911 Only).
	Location On —Location is set to On (Do Not Ask) or On (Always Ask).
	Keypad Locked —Keypad is locked.

indicator	
	Battery Level —Shows battery charge level. The more bars, the greater the charge.
	Bluetooth Active —Your phone is paired to another Bluetooth® device.
	Bluetooth On —Your phone's Bluetooth power is On .
	Bluetooth Connected —Your phone is connected to another Bluetooth device.
	In Call —Shows during an active voice call.
	New Message —Phone received a new text message.
	New Voicemail Message —Phone received a new voicemail message.

indicator	
	New Text & Voicemail Message —Phone received a new text and a new voicemail message.
	All Sounds Off —Master Volume is set to All sounds off (see page 18).
	Vibrate Only —Master Volume is set to Vibrate Only (see page 18).
	Alarm Only —Master Volume is set to Alarm Only (see page 18).
	Missed Call —Phone received an unanswered call.
	Speakerphone On —Speakerphone is on.
	Alarm On —An alarm has been set.

external display

 When you close your phone, the external display shows the time and date, status indicators, and notifications for incoming calls and events. For a list of status indicators, see the previous section.

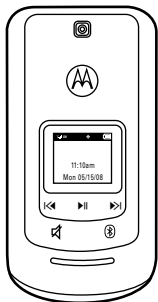

- change sound settings (see your *Getting Started Guide*)

 
handsfree

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

adjust volume


With the flip open, press the volume keys up or down to:


- turn off an incoming call alert
- adjust the earpiece volume during calls

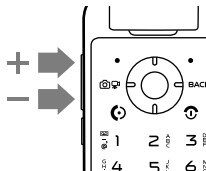

handsfree speaker

 
To activate the handsfree speaker during a call, press and hold the smart/-speakerphone key.

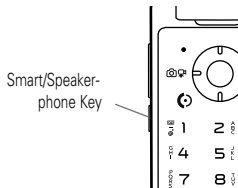

You will hear an audible alert, and your phone will show the speakerphone indicator  and **Speaker Phone On** on the main screen.

The handsfree speaker stays on until you press and hold the smart/speakerphone key again or turn off the phone.

To turn off the handsfree speaker, press and hold the smart/speakerphone key. Your phone will show **Speaker Phone Off** on the main screen.

To end the call, press the power/end key . You will hear an audible alert.

Note: The handsfree speaker won't work when your phone is connected to a handsfree car kit or headset.

accessory volume settings (car kit or headset)

To adjust volume of headsets or car kit accessories that are enabled for Bluetooth® wireless connections, press your phone's volume keys up or down during an active call.

lock & unlock phone

You can lock your phone manually or set it to lock automatically whenever you turn it off.


To lock or unlock your phone, you need the four-digit lock/unlock code (see page 22).

A locked phone still rings or vibrates for incoming calls or messages, **but you have to unlock it to answer.**

You can make emergency calls on your phone even when it is locked (see page 35).

manual lock

Find it:  >  Settings > Phone > Security

- 1 When prompted, enter the four-digit unlock code and press **Done**.
- 2 Scroll to **Lock Phone Now** and press .
- 3 When prompted, enter the four-digit unlock code and press **Done**.


To unlock your phone:

When you see **Enter Unlock Code**, enter your four-digit unlock code and press **Done**.

automatic lock

To lock the phone whenever you turn it on:

Find it:  >  Settings > Phone > Security

- 1 When prompted, enter the four-digit unlock code and press **Done**.
- 2 Scroll to **Phone Lock Setting** and press .

20 basics



- 3 Scroll to **On Power Up** and press .

The phone will be locked whenever it is turned on. To unlock the phone when you turn it on, enter the four-digit unlock code in the **Enter Lock Code** entry area and press **Done**.

keypad lock

You can lock the phone's keypad to prevent accidental key presses.




To lock the keypad manually:

With the flip open, press and hold  from the home screen. The phone will show **Phone Keypad is now Locked**. To unlock the keypad, press **Unlock Keypad**, then press .

To lock the keypad after a timer expires:

Find it:  >  Settings > Phone > Security

- 1 When prompted, enter the four-digit unlock code and press **Done**.

- 2 Scroll to **Keypad Lock Setting** and press .
- 3 Scroll to **Timed** and press .
- 4 Scroll to **2 Seconds**, **4 Seconds**, or **8 Seconds**, and press .

The keypad will be locked whenever it is at the home screen and no keys are pressed for the period of time you selected. **To unlock the phone**, enter the four-digit unlock code in the **Enter Lock Code** entry area and press **Done**.


lock side keys & external control buttons

Note: When you lock the side keys, you can still use the volume keys to dismiss an incoming call.

 
When your phone's flip is closed, you can lock the phone's side keys (see page 2) and external control buttons (see your *Getting Started Guide*). This prevents you from accidentally changing the **Master Volume** setting

with the volume keys, muting your phone, turning on Bluetooth® power, or activating the music player.

To lock the side keys and external control buttons, **press and hold the smart/speaker-phone key** on the left side of the phone.



If you press a locked side key when flip is closed, you see the  indicator. If you open the flip, the side keys are unlocked and can be used as normal.

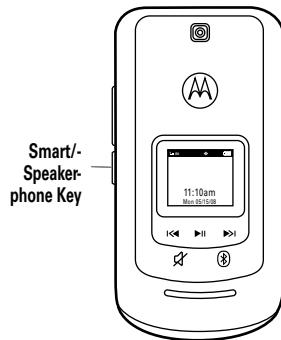To unlock the side keys and external control buttons, **press and hold the smart/speakerphone key**, then press the volume keys up or down.



lock application

Find it:  >  Settings > Phone > Security

- 1 When prompted, enter the four-digit lock code and press **Done**.
- 2 Scroll to **Restrictions** and press .
- 3 Scroll to the desired application and press :
Calls, Messages, Location, Data Modem, Browser.


codes

Your phone's four-digit **unlock code** is originally set to **1234** or to the **last four digits of your phone number**. The six-digit **security code** is originally set to **000000**. Your service provider may reset these codes before you get your phone.

If your service provider didn't change the unlock code, you should change it to prevent unauthorized use of your phone. The unlock code must contain four digits.

To change the unlock code:

Find it:  >  Settings > Phone > Security

- 1 When prompted, enter the four-digit unlock code and press **Done**.
- 2 With **Edit Lock Code** highlighted, press .
- 3 Enter the new code in both entry fields and press **Done**.

if you forget a code

Your phone's four-digit unlock code is set at the factory to **1234** or to the last four digits of your phone number. The six-digit security code is set to **000000**.

If you forget your security code, contact your service provider.

manage memory



Note: The microSD memory card is an **optional accessory**, available separately.



You can store multimedia content such as songs and photos on your phone's internal memory or on a removable microSD memory card.


Note: If you download a copyrighted file to your phone and store it on your memory card, you can use the file only when your memory card is inserted in your phone. You cannot send, copy, or change copyrighted files.

See your *Getting Started Guide* for instructions on installing a memory card.

set memory for multimedia content



Find it:  >  Settings > Storage Device


- 1 With **Save Options** highlighted, press .
- 2 Scroll to **Pictures**, **Videos**, or **Sounds**, and press .

- 3 Select **Phone Memory** or **Memory Card** and press .

view memory information

Find it:  >  Settings > Storage Device

- 1 Select **Phone Memory** or **Memory Card** and press .
- 2 If you selected **Phone Memory** in step 1, select **Phone Memory Usage**, **My Pictures**, **My Videos**, or **My Sounds**, and press .





If you selected **Memory Card** in step 1, select **Memory Card Usage**, **My Pictures**, **My Videos**, **My Sounds**, or **Format Memory Card**, and press .





move files

You can move files (such as photos, videos, sound, and music files) to the memory card to free up phone memory.

Note: Moving a file to the memory card deletes it from phone memory.

Find it:  >  Settings > Storage Device

- 1 Select **Phone Memory** or **Memory Card** and press .
 - 2 Scroll to **My Pictures**, **My Videos**, or **My Sounds**, and press . If necessary, scroll to the name of a folder and press .
 - 3 To move a single file, scroll to the file and press **Options**, then scroll to **Move** and press .

To move more than one file, press **Options**, then scroll to **Move Multiple** and press . Scroll to each file you want to move and press  to mark it, then press **Done**.
- Note:** Files that were preloaded on your phone can't be moved.
- 4 On the **Move To** screen, scroll to the destination for the moved file(s) and press .
 - 5 When prompted to confirm the move, select **Yes** and press .

TTY operation




You can use an optional TTY device with your phone to send and receive calls. You must plug the TTY device into the phone's headset jack and set the phone to operate in one of three TTY modes.



Use a TSB-121 compliant cable (provided by the TTY device manufacturer) to connect the TTY device to the phone.



Set the phone volume to level 4 (middle setting) for proper operation. If you experience a high number of incorrect characters, adjust the volume as needed to minimize errors.

For optimal performance, your phone should be at least 12 inches (30 centimeters) from the TTY device. Placing the phone too close to the device may cause high error rates.

set TTY mode

 When you set your phone to a TTY mode, it operates in that mode whenever the TTY device is connected.

Find it:  >  Settings > Call

- 1 Scroll to **TTY Setup** and press .
- 2 Scroll to one of the following **TTY Setup** options and press .



option	
Voice	Set to standard voice mode.
TTY	Transmit and receive TTY characters.
VCO	Receive TTY characters but transmit by speaking into phone microphone.
HCO	Transmit TTY characters but receive by listening to phone earpiece.

When your phone is in TTY mode, during an active call your phone displays the international TTY mode, the international TTY symbol, and the mode setting.

airplane mode

Note: Consult airline staff about the use of **Airplane Mode** in flight. Turn off your phone whenever instructed to do so by airline staff.



Use *airplane mode* to turn off your phone's calling features in locations where wireless phone use is prohibited. **You cannot make or receive calls or use Bluetooth® wireless connections in airplane mode**, but you can use your phone's other non-calling features.

Find it:  >  Settings > Phone > Airplane Mode > On or Off

view your phone number

Find it:  >  Settings > Phone Info > My Number







You will see your phone number at the top of the screen.



You can also view your number by pressing , then .

Tip: Want to see your phone number while you're on a call? Press **Options** > **Phone Info** > **My Number**.

tips & tricks

From the home screen (see your *Getting Started Guide*), you can use shortcuts:



To...	Do this...
redial a number	Press  , then scroll to the number you want to call and press  again.
lock/unlock keypad	To lock the keypad, press and hold  .  To unlock the keypad, press Unlock (the right soft key), then press  .
take photos	Press  .

To...	Do this...
turn handsfree speaker on & off	With the flip open, press and hold the smart/speakerphone key (see page 18).
see your number	Press  , then  .

personalize


Quick Find Powered by i | QiX™

Use Quick Find to access the full range of features and services on your phone, quickly and easily, without having to remember where or how to locate them.

Note: Quick Find activated by default. To **activate/deactivate Quick Find**, press  >  **Settings** > **Phone** > **Quick Find**.

Use Quick Find when you want to listen to music, send a message, find a video clip, or go to a menu option. From the home screen, enter the name of a song, a contacts entry, a video, or other items. As you enter

 letters, Quick Find shows you options that match the letters you enter.

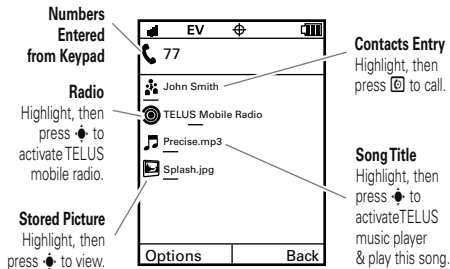

voice readout

You can set your phone to **speak aloud** when you press keys, receive a call with caller ID available, or scroll through **Contacts** or the recent calls lists.

Find it:  >  Settings > Sounds > Voice Readout

key volumes

To set the volume of the tones played **when you press keypad keys**:

Find it:  >  Settings > Sounds > Keypad Volume

To set whether your phone plays tones **when you press side keys**:

Find it:  >  Settings > Sounds > Volume Sidekeys

alert reminders

Set how many times your phone plays a message alert:

Find it:  >  Settings > Sounds > Alert Reminders

Select *Once*, *Every 2 Minutes*, *Every 15 Minutes*, or *Off*.

ring & vibrate

Set your phone to ring **and** vibrate when you receive an incoming call or message.


Note: **Master Volume** must be set to *High*, *Medium High*, *Medium*, *Medium Low*, or *Low* (see page 18).

Find it:  >  Settings > Sounds > Ring & Vibrate

answer options

You can use different methods to answer an incoming call.

Find it:  >  Settings > Call > Answer Options

options	
Flip Open	Answer by opening the flip.
Any Key	Answer by pressing any key.
Send Only	Answer only by pressing  .
Auto Answer with Handsfree	Automatically answer calls when the phone is connected to a handsfree device such as a car kit or headset.

backlight

Set the amount of time that the display and keypad backlights stay on.



Find it:  >  Settings > Display > Backlight

30 personalize

brightness

Find it:  >  Settings > Display > Brightness

banner

Set a heading to display near the top of the home screen:

Find it:  >  Settings > Display > Banner



menu language

Find it:  >  Settings > Phone > Language

clock format

Set how your phone shows the current time:



Find it:  >  Settings > Display > Clock Format

- 1 Scroll to **Inside Clock** (main screen) or **Outside Clock** (external display) and press .
- 2 Scroll to **Digital 12** for a 12-hour clock, **Digital 24** for a 24-hour clock, **Analog** for a dial clock, or **Off** for no clock, and press .

restore phone

Reset all options except unlock code, security code, and lifetime timer:

Find it:  >  **Settings** > **Phone** > **Security**


- 1 When prompted, enter the four-digit unlock code (see page 22) and press **Done**.
- 2 Scroll to **Restore Phone** and press .
- 3 Confirm that you want to reset the phone by scrolling to **Yes** and pressing .


- 4 When prompted, enter the four-digit unlock code (see page 22) and press **Done**.

The screen does not change while the phone resets all options. After a few seconds, the phone turns off and then turns back on.

AGPS & your location

Your phone uses the *Automatic Location Information* (ALI) feature, along with AGPS satellite signals, to tell the network where you are physically located.

When ALI is set to **Location** > **On (Do Not Ask)** or **On (Always Ask)** your phone shows the  (ALI on) indicator. Services may use your known location to provide useful information (for example, driving directions, or the location of the nearest bank). Your phone prompts you when the network or a service asks for your location. You can refuse at this point.

When ALI is set to **Location > Off (E911 Only)**, your phone displays the  (ALI off) indicator, and the phone does not send location information unless you call the emergency phone number (such as 911).

Find it:  >  **Settings > Phone > Location**

AGPS limitations & tips

Your phone uses *Assisted Global Positioning System* (AGPS) satellite signals to estimate your location. If your phone cannot find strong satellite signals, your AGPS might be slower, less accurate, or it might not work at all. AGPS provides only an approximate location, often within 150 feet (45 meters) but sometimes much farther from your actual location.



To improve AGPS accuracy:

- Go outside and away from underground locations, covered vehicles, structures with metal or concrete roofs, tall buildings, and

foliage. Indoor performance might improve if you move closer to windows, but some window sun shielding films can block satellite signals.



- Move away from radios, entertainment equipment, and other electronic devices that might interfere with or block AGPS satellite signals.
- If your phone has a retractable antenna, extend the antenna.
- Hold your phone away from your body, and point the phone antenna toward the sky. Do not cover the antenna area with your fingers.

AGPS uses satellites controlled by the U.S. government and subject to changes implemented in accordance with the Department of Defense AGPS user policy and the Federal Radio Navigation Plan. These changes might affect AGPS performance.

calls

To make and answer calls, see your *Getting Started Guide*.

redial a number

- 1 Press the send key  to see the **All Calls** list.
- 2 Scroll to the entry you want to call.
- 3 Press the send key  to redial the number.

Note: The **All Calls** list includes numbers that were busy when you dialed.


automatic retry

When you receive a **busy signal**, your phone displays **Call Failed, Number Busy**.



When you turn on automatic retry, your phone automatically redials a busy number for four minutes. When the call connects, your phone rings or vibrates once, displays **Redial Successful**, and completes the call.

Find it:  >  **Settings** > **Call** > **Auto Retry**

When automatic retry is turned off, you can manually activate the feature to redial a phone number. When you hear a fast busy signal and see **Call Failed**, press  or **RETRY**.



turn off a call alert



To turn off an alert for an incoming call, **press the down volume key** when you hear the alert.

recent calls

Your phone keeps lists of the calls you recently received and dialed, even if the calls didn't connect.

To see **recent calls**:

Find it:  >  Recent Calls

- 1 Scroll to **Received Calls**, **Missed Calls**, **Dialed Calls**, or **All Calls**, and press .
- 2 Scroll to an entry.
- 3 Press  to call the number.

To see call details (like time and date), press .


Press **Options** to view and select these options: **Save**, **Lock**, **Delete**, **Delete All**, **Timers**.


To send a message to the entry, press **Send Msg**.

To see **call timers**:

Find it:  >  Recent Calls > Timers

return a missed call

When you miss a call, your phone shows the  (missed call) indicator and **[Number] Missed Calls**.

- 1 When you see the missed call indicator, select **View Now** to see the missed calls list.
- 2 Scroll to an entry on the list.
- 3 Press  to call the entry.

To see call details (like time and date), press .

Press **Options** to open the missed calls **Options** menu (see page 34).

Press **Send Msg** to send a message to the entry.


To return a missed call **later**, select **View Later** when you see the missed calls indicator.

speed dial

Note: Speed dial number 1 is already assigned to your voicemail number.


To **assign a speed dial number** to a contact:

Find it:  >  **Contacts** > **Speed Dial**

- 1 Scroll to an unassigned speed dial location entry and press **Set**.
- 2 Scroll through the **Contact List** to the contact to be assigned the number and press .
- 3 Select **Yes** to confirm your selection.



To **see a contact's speed dial number**:



Find it:  >  **Contacts** > **Contact List**

As you scroll through contacts, speed dial numbers are identified by the speed dial indicator .

To **activate speed dialing**, you must set **One Touch Dial** to **On**:

Find it:  >  **Settings** > **Call** > **One Touch Dial**

To **call a speed dial number 1 through 9**: Press and hold the single-digit speed dial number (key  through ) for the contact for one second.


To **call a speed dial number with more than one digit**: When you enter the speed dial number, press and hold the final digit. For example, to call speed dial number **23**, press , then press and hold .

emergency calls


Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked.

Note: Emergency numbers vary by country. Your phone's preprogrammed number(s) may not work in all

locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Enter the emergency number.
- 2 Press  to call the emergency number.

AGPS during an emergency call

When you make an emergency call, your phone can use *Assisted Global Positioning System* (AGPS) satellite signals to tell the emergency response center your approximate location. 

The AGPS feature has limitations, so always tell the emergency response center your best knowledge of your location. Remain on the phone for as long as the emergency response center instructs you.

AGPS **might not work** for emergency calls:

- Your phone's AGPS feature must be turned on (see page 31).
- Your local emergency response center might not process AGPS location information. For details, contact your local authorities.

For best results:

- Go outside and away from underground locations, covered vehicles, structures with metal or concrete roofs, tall buildings, and foliage. Indoor performance might improve if you move closer to windows, but some window sun shielding films can block satellite signals.
- Move away from radios, entertainment equipment, and other electronic devices that might interfere with or block AGPS satellite signals.

If your phone cannot find strong AGPS satellite signals, the location of the nearest cell tower in contact with your phone is automatically provided to the emergency response center.

attach number

While dialing (with digits visible on the display), press **Options**, then scroll to and select **Attach Number** to attach a number from your **Contact List** or **Recent Calls** list.

insert special characters



While entering a number, press **Options** and select one of these options:

- **Insert Pause (p)**—Your phone pauses for two seconds before it dials the next digit.


- **Insert Wait (w)**—Your phone waits until the call connects, then prompts you for confirmation before it dials the next digit(s).

international calls

If your phone service includes international dialing, you can set your phone to automatically insert your international access code:



Find it:  >  **Settings** > **Call** > **Int'l Dialing** > **Automatic**

When **Int'l Dialing** is set to **Automatic**, insert your local international access code (indicated by +) by pressing and holding . Then, use the keypad to dial the country code and phone number.

hearing aid

You can set your phone for hearing aid compatibility:

 >  Settings > Call > Hearing Aid

Note: For more information about hearing aid compatibility, see “Hearing Aid Compatibility with Mobile Phones” on page 81.

in-call options

During an active call, press **Options** to access these options:

Contacts

Phone Info

Recent Calls

Datebook

Bluetooth


Games & Apps

Messaging

Note: When you have a Bluetooth® device connected during a call, you may also see **Audio to Phone** and **Disconnect**

Bluetooth options. When you have **TTY Mode** on, you may also see a **TTY Setup** option.

call times

Network connection time is the elapsed time from the moment you connect to your service provider’s network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.

features

minute beep



Set your phone to beep every minute during a call:

 >  Settings > Sounds > Service Alerts > Minute Beep

view and reset call times



 >  Recent Calls > Timers

Scroll to and view the times for **Last Call**, **All Calls**, **Received Calls**, **Dialed Calls**, **Roaming Calls**, **Transmitted Data**, **Received Data**, **Total Data**, **Last Reset**, **Lifetime Calls**, or **Lifetime Data Counter**.

To reset individual timers: Scroll to a timer and press **Reset**. When prompted, select **Yes** to confirm that you want to reset the timer.

To reset all timers: Press **Reset All**. When prompted, select **Yes** to confirm that you want to reset all timers.

more calling features

features

DTMF Tones



Your phone can send **Short** or **Long Dual Tone Multi Frequency** (DTMF) tones for calling card calls or other automated touch-tone calls.

Set up DTMF tones:

 >  Settings > Call > DTMF Tones

3-way calling



During a call, dial the next number and press , then press  again.

text entry


When you need to enter text (such as in a text message), you can use the keypad. Your phone changes to a text entry mode, indicated by an icon at the top of your screen.

entry modes	
iTAP English	Let the phone predict each English word as you press keys.
iTAP French	Let the phone predict each French word as you press keys.
Abc	Enter letters and number, first character of a sentence in uppercase.
ABC	Enter letters and numbers, all characters in uppercase (not available when editing a contact).
123	Enter numbers only.

entry modes	
Symbols	Enter symbols.


Note: Your phone may not contain all of the languages listed.


To set your preferred text entry mode, press **Options** > **Entry Mode**, then select the entry mode.


To change capitalization, press  to switch to the option you want:

capitalization option	entry mode	indicator
first letter of sentence in uppercase	iTAP English	iTAPEn
	iTAP French	iTAPFr
	Abc	Abc

capitalization option	entry mode	indicator
all uppercase letters	iTAP English	iTAPEN
	iTAP French	iTAPFR
	ABC	ABC
all lowercase letters	iTAP English	iTAPen
	iTAP French	iTAPfr
	ABC or Abc	abc

To accept a word completion that appears after the letters you entered, press  right.

To enter a space and move on to the next word, press .

To enter punctuation or symbols, press .

To cancel your message, press .

messages

send messages



A multimedia message (MMS) contains embedded media objects such as photos, pictures, animations, sounds, and voice records. You can also insert a vcard for a contact or a calendar event. You can send a multimedia message to other wireless phones with multimedia messaging capabilities and to email addresses.

create & send a message

Find it: > Messaging > Create Message

1 Enter a phone number or email address.

or

Press to select **Add**. On the **Add Recipients** screen, select **Contacts**, **Recent Calls**, or **Groups**. Press to mark




each entry you want to include as a message recipient, and press **Done** when finished.




Tip: Skip the menus! While entering a number from the home screen, press **Options**, then scroll to **Send Message** and press .




2 Scroll down to the text entry area and enter message text.

3 **To insert a prewritten message**, press to select **Insert**, then scroll to **Quick Text** and press . Scroll to the quick text you want to insert and press .

To insert a sound, press to select **Insert**, then scroll to **Audio** and press . Scroll to the desired sound and press .

To insert a stored picture or video, press  to select **Insert**, then scroll to **Pictures** or **Video** and press . Scroll to the desired object and press .

To insert a vcard for a contact in your **Contacts**, press  to select **Insert**, then scroll to **Contact Info** and press . Scroll to the desired entry and press .


To insert an event from your phone's Datebook, press  to select **Insert**, then scroll to **Datebook Event** and press . Scroll to the desired event and press .

- 4 Press **Options** to view and select these options: **Entry Mode**, **Save to Drafts**, **Insert Subject**, **Insert Object**, **Priority**, **Delivery**, **Cancel Message**.
- 5 Press **Send** to send the message.

Note: The options you see depend on the type of message you are sending and the type of object you insert into the message.

receive messages




When you receive a message, your phone plays an alert and displays the  (new message) indicator and a **New Message** notification.

Open the flip and select **View Now** to read the message immediately, or select **View Later** to save it in your **Inbox** for viewing later.

To read messages in your **Inbox**:

Find it:  >  **Messaging** > **Inbox**


- 1 Scroll to the message you want to read.
- 2 Press  to open the message. Your phone displays the media object, then the message.

- 3 Press **Reply** if you want to respond to the message.

Press **Options** to view and select from these options:

Reply with Copy, Forward, Lock/Unlock, Save To Contact, Start Slide Show, Save Object, Message Details, Delete Message, Delete Multiple, Delete All, Sort By, Save Quick Text, Create Message.

Note: The options you see depend on the type of message you receive and whether the message contains multimedia objects.

Press  to return to the message **Inbox**.

Multimedia messages can contain different media objects:


- Photos, pictures, and animations are displayed when you read the message.
- A sound file begins playing when the message text is displayed. Use the volume keys to adjust the volume.

 
- If the message includes an attached file, select the file indicator or filename and press **VIEW** (for an image file), **PLAY** (for a sound file), or **OPEN** (for an object such as a **Contacts** or calendar entry or an unknown file type).

voicemail

Note: Your service provider may give you additional information about using voicemail. For questions about voicemail, contact your service provider.



When you **receive** a voicemail message, your phone shows the voicemail message indicator  and **New Voicemail**. Press **Call** to listen to the message.

To **check** voicemail messages later, press and hold .

more messaging features


features

create quick text



Enter and store **Quick Text** (prewritten) messages that you can select and send later.


 >  **Messaging**

Press **Options**, then scroll to **Quick Text** and press .
Press **Options**, then select **New**.

send quick text



 >  **Messaging**

Press **Options**, then scroll to **Quick Text** and press .
Scroll to the quick text message you want to send and press **Send**.

features

set up messaging




 >  **Messaging**

Press **Options** and select **Auto Cleanup**, **Voicemail #**, **Callback #**, **Signature**, or **Auto Receive**.

view sent message



 >  **Messaging** > **Outbox**

Scroll to the message you want to view and press .

Press **Options** to access the following options: **Resend**, **Forward**, **Lock**, **Save to Contacts**, **Message Details**, **Delete Message**, **Delete Multiple**, **Delete All**, **Sort By**, or **Create Message**.

features

delete messages



Delete all messages or only messages from the **Outbox** or **Drafts** folder:

 >  **Messaging**

Press **Options**, then scroll to and select **Delete**. Select **Inbox**, **Drafts**, **Outbox**, or **All**.


To delete Inbox or Outbox messages automatically, press **Options**, then select **Auto Cleanup**.

features

drafts



 >  **Messaging** > **Drafts**

To complete and send a saved draft message, scroll to the message and press .

To view and select other options, press **Options** to access the following: **Send**, **Edit**, **Lock**, **Delete**, or **Create Message**.

Note: The options you see depend on your service provider.

store message objects



Go to a multimedia message slide, or highlight an object in a letter, then press **Options** and select **Save Object**.

entertainment

play music

For instructions on playing music on your phone's music player, see your *Getting Started Guide*.

get music



Just load your favorite music onto your computer, then transfer the music from the computer to your phone. You'll need:

- the Windows XP™ operating system
- Windows Media Player, version 11 or later

To download Windows Media Player, go to <http://www.microsoft.com/windowsmedia>.

- a USB data cable (sold separately)

Note: The unauthorized copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorized or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

load music onto your computer

You can purchase Microsoft® Windows® Media DRM-protected music files from supported on-line music stores (such as telusmobility.com/music).

You can also **load song files from a music CD** onto your computer:

- 1 Insert the music CD in your computer's CD drive.

- 2 Open Windows Media Player 11.
- 3 Copy the music CD to the media player library (also called *ripping* the CD).

If your computer is connected to the Internet, the media player may retrieve information such as song titles, album name, artist name, and album artwork. This information will display in your phone's music player after you transfer the music to your phone.

transfer music

Before you copy files to your phone, make sure the files are in a format that the phone recognizes. Your phone's music player can play the following types of audio files: AAC, AAC+, MP3, WMA.

Before you transfer music to your phone:

- 1 Insert a memory card into your phone (see your *Getting Started Guide*).
- 2 Set your phone to **Mass Storage** mode by pressing  >  **Settings** > **USB Mode** > **Mass Storage**.
- 3 Attach a Motorola Original USB cable to the mini USB port on your phone and to an available USB port on your computer. A Motorola Original USB cable and supporting software may be included with your phone. These tools are also sold separately.



transfer music with Windows Media Player

You can Windows Media Player 11 to transfer music from the computer to your phone.

Note: Windows Media Player 11 requires Windows XP™ or later to run. If you are using an earlier

version of Windows OS, you'll need to manually transfer music to your phone.

- 1 Open Windows Media Player 11.

Your phone appears in the upper right corner of the Windows Media Player 11 screen. Music files stored on the phone's memory card are listed on the left side of the screen.

- 2 Select the "Sync" tab in Windows Media Player 11.
- 3 Drag and drop songs or playlists onto the "Sync List" on the right side of the Windows Media Player 11 screen.
- 4 Click "Start Sync" to copy the songs onto the phone's memory card.
- 5 When you finish, disconnect your phone from the computer.

transfer music manually

Note: You must have an **optional microSD memory card** installed in your phone to use TELUS mobile music. TELUS mobile music requires that you format the memory card (see your *Getting Started Guide*).

- 1 On your computer, double-click on the "My Computer" icon to locate the "Removable Disk" icons for your phone and memory card.
- 2 Double-click the "Removable Disk" icon for your phone or memory card.
- 3 In the "Removable Disk" window, **create the "my_music" folder** (if one does not already exist).

Note: TELUS mobile music checks for songs only in this folder.

- 4 **Drag and drop the music files** you want **onto the "my_music" folder** in the removable disk icon.

- 5 When you finish, right-click the “Safely Remove Hardware” icon in the system tray at the bottom of your computer screen, then select “USB Mass Storage Device.”

TELUS mobile radio™



Find it:  >  Music & Media > TELUS mobile radio



TELUS mobile radio, powered by XM Satellite Radio, gives you access to a wide range of 100% commercial-free music, plus the best in comedy, talk, and entertainment, right on your TELUS mobile phone. For more information, please visit: www.telusmobility.com/mobileradio.



camera & camcorder

take photos

 
The camera lens is on the front of the phone when the flip is closed and on the back of the phone when the flip is open. **To get the sharpest photos, wipe the lens clean with a dry cloth before you take a photo.**


With the phone powered on and the flip open:

- 1 Press the camera/camcorder key .

Tip: You can also activate the camera by pressing  >  Camera, **or** by pressing  >  Music & Media > Camera.

Your phone shows the active camera viewfinder screen:

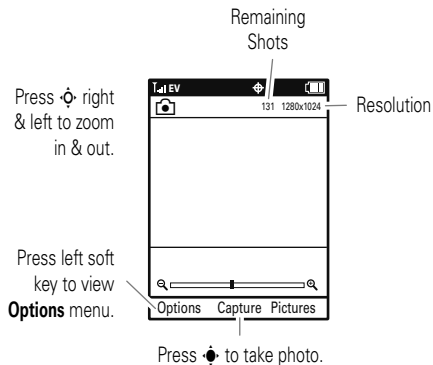



Tip: Press the camera/camcorder key  to toggle between the camera and camcorder.


- 2 Point the camera lens at the subject.

Press  right and left to zoom in and out.

Press **Options** to view and select these options: **Resolution**, **Self Timer**, **Add Picture Frame**, **Brightness**, **White Balance**, **Color Effects**, **Online Album Reminder**, **Shutter Tone**, **Storage Location**.

Note: You may not see all of the options listed, depending on your service provider. **Storage Location** appears only if you have installed an optional memory card, available separately.


- 3 Press  (**Capture**) to take the photo.
- 4 Press **Send** to send the photo in a message. You can also send it to an online album. 



Press  (**Save**) to save the photo.

Press **Delete** to delete the photo and return to the active photo viewfinder.

 
- 5 Press  to return to the main screen.


record videos


- 1 Press and **hold** the camera/camcorder key  to activate the camcorder.

Tip: You can also activate your phone's camcorder by pressing  >  **Music & Media** > **Video Camera**.

Your phone shows the active camcorder viewfinder screen:

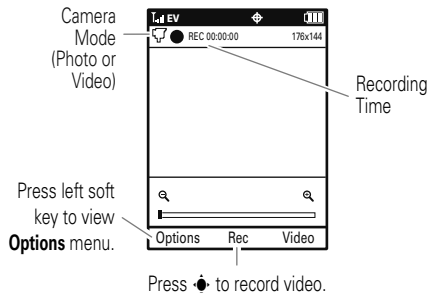





Tip: Press the camera/camcorder key  to toggle between the camera and camcorder.

- 2 Point the camera lens at the subject.
Press  right and left to zoom in and out.

Press **Options** to view and select these options: **Video Length**, **Self Timer**, **Brightness**, **White Balance**, **Color Effects**, **Online Album Reminder**, **Storage Location**.

Note: You may not see all of the options listed, depending on your service provider. **Storage Location** appears only if you have installed an optional memory card, available separately.

- 3 Press  (**Rec**) to begin video recording.
- 4 Press  (**Stop**) to stop video recording.
- 5 Press **Send** to send the video in a message. You can also send it to an online album. 

Press  (**Save**) to save the video.

Press **Delete** to delete the video and return to the active camcorder viewfinder.

- 6 Press  to return to the main screen.

view pictures




Find it:  >  Music & Media > Pictures

- 1 Scroll left and right to view pictures.


Press **Options** to view and select these options: **Send, To Online Album, Set As, Take New Picture, Rename, Move, Lock/Unlock, Print, Delete, Delete All, Mark, Mark All, File Info.**

Note: You may not see all of the options listed, depending on your service provider. Some options appear only for photos that you have taken and saved using the phone's camera.

Press **Edit** to access editing tools that you can use to modify the selected picture.

If you see **Slideshow** at the bottom middle of the screen, press  to see a "slideshow" presentation of all pictures, shown in sequence. Press  to pause the slideshow. Press **Settings** to modify slideshow settings. Press  to end the slideshow and return to the picture viewer screen.

If you see **Ok** at the bottom middle of the screen and the message **Buy Wallpaper**, press  to purchase and download pictures.

 
- 2 Press  to return to the **Media & Music** menu.

play videos


To play videos that you have recorded or received in multimedia messages:

Find it:  >  Music & Media > Videos

Your phone shows the video playback screen:

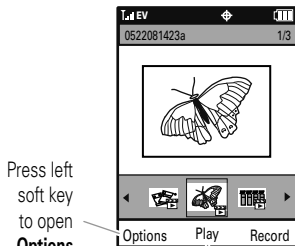

Press left soft key to open **Options** menu.

 
Press  to play selected video.

- 1 Scroll left or right to highlight a video.

Press **Options** to view and select these options: **Send, To Online Album, Rename, Move, Lock/Unlock, Delete, Delete All, Trim, Mark, Mark All, File Info.**

Note: Your phone's options may vary. Most options apply only to user-recorded videos and are not available for pre-installed videos.

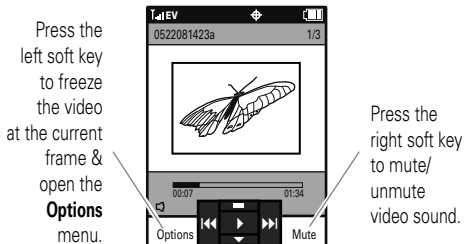


- 2 Press  to play a highlighted video.







Press the left soft key to freeze the video at the current frame & open the **Options** menu.


Press the right soft key to mute/unmute video sound.

Use these keys to control video playback:

video playback controls	
pause/play	Press  .
fast forward	Press & hold  right .
next video	Press  right .

video playback controls	
rewind	Press & hold  left.
previous video	Within first two seconds of video playback, press  left.
restart video	After first two seconds of video playback, press  left.
switch portrait & landscape	Press  down.



During video playback, press **Options** to view and select these options: **Extract Current Frame**, **Videos**, **File Info**.

- When the video is finished playing, press  to return to the playback screen.

launch browser



Use your phone's browser to surf your favorite Web sites, upload videos to a video blog, and download files and applications to your phone. Log onto your internet-based email account to check your email.

Find it:  >  **Wireless Web**

To use the browser, you must configure it with the appropriate settings for Internet access, and you need to have data service activated for your account with your service provider (additional fees may apply for this service).

You can get the required browser settings for your phone by contacting your service provider directly or by visiting this Web site:

<http://motorolasetup.tarsin.com>

Note: Not all service provider settings may be available yet through this Web site.



manage sounds

You can record sounds for later playback.

create a sound


- 1 Press and hold the voice key on the right side of the phone (see page 2).

Tip: You can also press  >  **Music & Media**
> **Ringtones & Sounds** > **Sounds** > **Record New**.

- 2 Press  (**Start**) to begin recording.
- 3 Press  again to stop recording.

play a sound

Find it:  >  **Music & Media** > **Ringtones & Sounds** > **Sounds**

Scroll to the sound title and press . Press **Options** to open a menu that can include: **Send**, **Rename**, **Move**, **Lock**, **Delete**, **Delete All**, **Mark**, **Mark All**, **File Info**.

tools

voice recognition

Your phone's voice recognition feature lets you make calls and complete other actions by speaking commands to your phone.

voice recognition tips

- Say the names of **Contact List** entries exactly as listed. For example, to call the mobile number for an entry named Bill Smith, say "Call Bill Smith mobile." (If the entry includes only one number for Bill Smith, say "Call Bill Smith.")
- Speak numbers at a normal speed and volume, and pronounce each digit distinctly. Avoid pausing between digits.

voice commands

- 1 **With the phone flip open**, press and **release** the voice key on the right side of the phone.

Note: If you press and **hold** the voice key when the flip is open, voice recording is activated.


With the phone flip closed, press and **hold** the voice key on the right side of the phone.

Your phone says **Please say a command** and shows a list of voice commands: **Call <Name or #>**, **Send Msg <Name or #>**, **Go To <Shortcut>**, **Check <Item>**, **Contact <Name>**, **Play <Playlist>**, **Help**,

- 2 Speak the command you want.

voice recognition settings

To modify voice recognition settings:

- 1 Press and release the voice key on the right side of the phone.
- 2 Press **Settings**.
- 3 Scroll to the option you want and press : **Digit Dial Readout, Confirmation, Sensitivity, Adaptation, Prompts, Call Alert**.

To access in-device help for a setting you speak, press **Info**.


contacts

create contacts

For information on creating a new contact, see your *Getting Started Guide*.

view contacts


Find it:  >  **Contacts** > **Contact List**

To view details for a contact, scroll to the contact and press .

For other options, scroll to the contact and press **Options**.

call contacts


Find it:  >  **Contacts** > **Contact List**

Scroll to the contact you want to call and press .

edit contacts

To modify or delete a contact:


Find it:  >  **Contacts** > **Contact List**

Scroll to the contact and press **Options**, then scroll to the option you want and press .


ringer IDs

Assign a ringtone to play whenever you receive a call from a contact.

Find it:  >  **Contacts** > **Contact List**

- 1 Scroll to the contact and press **Options**, then select **Edit Contact**.
- 2 Scroll to **Call Ringer ID** and press .
- 3 Scroll to the ringtone you want.

Note: As you scroll through settings, your phone plays a sample of each setting you highlight.

- 4 Press  to select the highlighted ringtone, then press **Save**.

picture IDs

Assign a photo or picture to show when you receive a call from a contact:

Find it:  >  **Contacts** > **Contact List**

- 1 Scroll to the contact and press **Options**, then select **Edit Contact**.
- 2 Scroll to **Picture** and press .
- 3 Scroll left or right to the picture you want and press , then press **Save**.

Press **Options** and select **Capture** to take a new photo (see page 50) to use as a picture ID.

set default number

Set the primary number for a contact with multiple numbers. This will be the number your phone shows when listing contacts.


Find it:  >  **Contacts** > **Contact List**

- 1 Scroll to the contact and press **Options**, then select **Edit Contact**.
- 2 Scroll to the number to be set as the default number and press **Options**, select **Set as Default**, then select **Save**.

sort contacts

Set whether contacts are listed in alphabetical order by first or last name:

Find it:  >  **Contacts** > **Contact List**

- 1 Press **Options**, then select **Sort Name**.
- 2 Scroll to **First Name** or **Last Name** and press .

groups


To send a text message to many people at once, you can add contacts to **Groups**. Then, when you enter a group's name as a message recipient, the message is sent to all members of that group.


Contacts comes with several groups already created, and you can create your own groups.

To add contacts to a group:

Find it:  >  **Contacts** > **Groups**

- 1 Scroll to the group name and press **Options**, then select **Add Contacts**.

- 2 Scroll to each contact you want to add and press .

A check mark appears in the box beside a contact when you select it. To deselect a contact, scroll to the contact and press  to remove the check mark.








- 3 When you finish selecting contacts, press **Done** to save your selections.




To create a new group:

Find it:  >  **Contacts** > **Groups**



- 1 Press **New**.
- 2 Enter the new group name and press **Save**.

network

features	
network settings	
View network information and adjust network settings:	
 >  Settings > Phone > Network Selection	
Scroll to the desired network setting and press  .	
call connect tones	
Set phone to play a tone when a call connects:	
 >  Settings > Sounds > Service Alerts > Call Connect	

features	
call drop tone	
Set phone to play an alert tone whenever the network drops a call. (Because digital networks are so quiet, a call drop alert may be your only indication that a call was dropped.)	
 >  Settings > Sounds > Service Alerts > Voice Call Drop	

personal organizer



features	
add datebook event	
 >  Datebook	
Scroll to the desired day and press Add , then enter event information and press Done .	

features

view datebook event

View or edit event details:

 >  **Datebook**

Scroll to the desired day and press , then scroll to the *event* and press .

To edit the event, press **Edit**.

event reminder

Press **View** to view an event reminder.

Press **Exit** to dismiss an event reminder.

set alarm

 >  **Tools** > **Alarm Clock**

Select **Alarm 1**, **Alarm 2**, or **Alarm 3**, then turn on the alarm, specify the alarm time, recurrence, and alert type.

features

turn off alarm

Press **Off** or .

calculator


 >  **Tools** > **Calculator**

view world clock

To view the current time in cities around the world:

 >  **Tools** > **World Clock**

Scroll left or right to see the time in a desired city.

Or, press **Cities**, then scroll to a city and press .


Press **Set DST** to set Daylight Savings Time for a city.

features

notepad

Your phone stores the most recent digits you entered in the **Notepad**. These digits can be a number that you called or a number that you entered and want to save for later. You can also create notes with information that you want to save for later.

 >  **Tools** > **Notepad**

Your phone shows a list of notes. To view the contents of a note, scroll to the note and press . To create a new note, press **New**.

connections

cable connections



Your phone has a mini USB port that allows you to connect it to a computer.

Note: Motorola Original™ data cables and supporting software are sold separately. Check your computer to determine the type of cable you need.

If you use a USB cable connection:

- Make sure both your phone and the computer are turned on.
- Make sure to connect the phone to a high-power USB port on your computer (not a low-power one such as the USB port on your keyboard or bus-powered USB hub). Typically,

USB high-power ports are located directly on your computer.

Note: If you connect your phone to a low-power USB port, the computer may not recognize your phone.

Turn your phone into a modem:

Find it:  >  Settings > USB Mode

Scroll to **Modem/COM** and press .



Bluetooth® connections



Your phone supports Bluetooth wireless connections. You can connect your phone to a Bluetooth headset or car kit, or connect to another device to transfer files.

To view a list of Bluetooth profiles supported by your phone:

Find it:  >  Tools > Bluetooth

- 1 Press **Options**, then scroll to **Supported Profiles** and press .
- 2 To see more information about a profile, scroll to the profile name and press .

For more Bluetooth wireless connections support information, go to www.motorola.com/Bluetoothsupport.

Note: All multimedia (video player, audio player, shutter tones) will play from the speakerphone when your phone is connected to another Bluetooth device.

For maximum Bluetooth security, always connect Bluetooth devices in a safe, private environment, away from other devices with Bluetooth connection capabilities.

turn Bluetooth power on/off

Set Bluetooth power to be on whenever your phone is on.

Find it:  >  Tools > Bluetooth

Press **Turn On** (the right soft key).



Note: To extend battery life when you are not actively using a Bluetooth connection, turn Bluetooth power off by using this procedure and pressing **Turn Off**. If you turn off Bluetooth power, your phone will not connect to other Bluetooth devices until you turn on Bluetooth power and then reconnect.

place phone in discovery mode

Allow an unknown Bluetooth device to discover your phone:

Find it:  >  Tools > Bluetooth

- 1 Press **Options**.

- 2 Scroll to **Discovery Mode** and press .
- 3 Scroll to **On** and press .

The following message appears: **Discovery on: For one minute other devices can find you.**

If the device requests permission to bond with your phone, press **YES** and enter the device PIN code to create a secure connection with the device. (The PIN code is typically set to **0000**.)

Note: See the instructions that came with your device for the device's PIN code and other information about the device.


pair with headset, handsfree device, or computer

Note: If you want to use your Motorola Bluetooth headset with both an audio device and your phone, use your phone's Bluetooth menus to connect the phone with the headset. If you establish the connection by pressing a button on the headset, or if

you allow the headset to connect automatically by turning it on, you may experience unexpected results.

Before you try to connect to another Bluetooth device, make sure your phone's Bluetooth power is **On** and the device is in *pairing* or *bonding* mode (see the user guide for the device). You can connect your phone with only one device at a time.

Find it:  >  Tools > Bluetooth

- 1 Press  to select **Add New Device**.


Note: If your Bluetooth power is not turned on, your phone will prompt you to turn it on.

- 2 When you see **Place the device you are connecting to in discoverable mode,** press .

Your phone lists the devices it finds within its range. If your phone is already connected to a device, your phone lists that device and identifies it with a ✓ (in-use indicator).


- 3 Scroll to a device in the list and press **Pair** to connect to the device.
- 4 If the device requests permission to bond with your phone, press **YES** and enter the device PIN code to create a secure connection with the device. (The PIN code is typically set to **0000**.)


Note: See the instructions that came with your device for the device's PIN code and other information about the device.

When the connection is made, the  (Bluetooth) indicator or a **Bluetooth** message displays in the home screen.

connect to handsfree device during a call



- 1 During a call, press **Options**, then select **Connect Bluetooth**.
- 2 Scroll to **Add New Device**, or select the name of a device if you have paired with it previously, and press .

- 3 If connecting to a new device, place the new device in discoverable mode and press  on your phone.
- 4 When your phone finds the device, press **Pair**.
- 5 If prompted, enter the default PIN code **0000**.

Note: You can't switch to a headset or car kit if you are already connected to a Bluetooth device.

copy files to another device







You can use a Bluetooth connection to transfer a contact or file to another Bluetooth device.

To transfer a contact:


Note: Make sure the device receiving the contact has Bluetooth power on and is in discoverable mode.

Find it:  >  **Contacts** > **Contact List**

- 1 Scroll to the contact you want to transfer and press **Options**.





- 2 Scroll to **Send Contact Info** and press .
- 3 Press  to select **via Bluetooth**.
- 4 To add more contacts, scroll to each contact and press .
- 5 Press **Done**, then press **Send**.
- 6 Scroll to **Add New Device**, or scroll to the device that you want, and press .

Note: If your phone does not already have Bluetooth power turned on, it prompts you to turn it on.

- 7 If connecting to a new device, place the new device in discoverable mode and press .
- 8 When the phone shows the list of devices, scroll to the device you want and press **OK**.
- 9 If prompted, enter the default PIN code **0000**.

To transfer a file to another device:


Note: Make sure the device receiving the file has Bluetooth power on and is in discoverable mode. The receiving phone must be capable of receiving the file type.


- 1 On your phone, select the file (such as a picture, video, or sound) and press **Options**.
- 2 Press  to select **Send**.
- 3 Scroll to **via Bluetooth** and press .
- 4 Scroll to **Add New Device**, or scroll to the device that you want, and press .
- 5 If connecting to a new device, place the new device in discoverable mode and press  on your phone.
- 6 When the phone shows the list of devices, scroll to the device you want and press **OK**.
- 7 If prompted, enter the default PIN code **0000**.

- 8 When your phone prompts you to confirm that you want to send the file, press **Yes**.

receive files from another device



Note: If you do not see the Bluetooth indicator  at the top of your phone's display, **turn on your phone's Bluetooth power** (see page 65).

- 1 Pair your phone with the other device (see page 66).
- 2 Send the file from the other device. (If necessary, refer to the user's manual for the device for instructions.)
- 3 When prompted to accept the sent object, scroll to **Yes** and press .



Your phone notifies you when the transfer is complete. If necessary, press **Save** to save the file.

disconnect from a device



To disconnect from a device **while the phone is idle**:

Find it:  >  **Tools** > **Bluetooth**

- 1 Scroll to the name of the device from which you want to disconnect and press **Options**.
- 2 Scroll to **Remove Device** and press .
- 3 When your phone prompts **Remove devicename from List?**, scroll to **Yes** and press .

To disconnect from a device **during an active call**:

- 1 Press **Options**.
- 2 Scroll to **Disconnect Bluetooth** and press .

service & repairs

If you have questions or need assistance, we're here to help.

Go to www.motorola.com/support, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-331-6456 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

Specific Absorption Rate Data

This model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to

reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 1.09 W/kg, and when worn on the body, as described in this user guide, is 0.89 W/kg. The SAR value for this product in its data transmission mode (body-worn use) is 0.42 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.



MOTOROLA

Important Safety and Legal Information

Safety and General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.

Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

For optimal mobile device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or

approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at:

www.motorola.com

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Implantable Medical Devices

If you have an implantable medical device, such as a pacemaker or defibrillator, consult your physician before using this mobile device.

Persons with implantable medical devices should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from the implantable medical device when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the implantable medical device to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your healthcare provider.

Driving Precautions

The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving.

Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Responsible driving practices can be found in the "Smart Practices While Driving" section in this guide (or separate guide).

Operational Warnings

Obey all posted signs when using mobile devices in public areas.





Potentially Explosive Atmospheres



Areas with potentially explosive atmospheres are often, but not always, posted and can include fueling areas, such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Symbol Key

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.

Symbol	Definition
	Do not let your battery, charger, or mobile device get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

Batteries & Chargers

Caution: Improper treatment or use of batteries may present a danger of fire, explosion, leakage, or other hazard. For more information, see the “battery use & safety” section in the user’s guide.

Keep Your Mobile Device and Its Accessories Away From Small Children

These products are not toys and may be hazardous to children. For example:

- A choking hazard may exist for small, detachable parts.
- Improper use could result in loud sounds, possibly causing hearing injury.
- Improperly handled batteries could overheat and cause a burn.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a

substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are tired.

Caution About High Volume Usage



Warning: Exposure to loud noise from any source for extended periods of time may affect your hearing. The louder the volume sound level, the less time is required before your hearing could be affected. To protect your

hearing:

- Limit the amount of time you use headsets or headphones at high volume.

- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

If you experience hearing discomfort, including the sensation of pressure or fullness in your ears, ringing in your ears, or muffled speech, you should stop listening to the device through your headset or headphones and have your hearing checked.

For more information about hearing, see our Web site at www.motorola.com/hearingsafety (in English only).

Industry Canada Notice to Users

Operation is subject to the following two conditions: (1) This device may not cause interference and (2) This device must accept any interference,

FCC Notice to Users

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:xxxxxx on the product label.

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

[Mar0108]

including interference that may cause undesired operation of the device. See RSS-GEN 7.1.5.

interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful

interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Motorola Limited Warranty for the United States and Canada

What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its telephones, pagers, messaging devices, and consumer and professional two-way radios (excluding commercial, government or industrial radios) that operate via Family Radio Service or General Mobile Radio Service, Motorola-branded or certified accessories sold for use with these Products ("Accessories") and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Products and Accessories

Products Covered	Length of Coverage
Products and Accessories as defined above, unless otherwise provided for below.	One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
Decorative Accessories and Cases. Decorative covers, bezels, PhoneWrap™ covers and cases.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.

Products Covered	Length of Coverage
Monaural Headsets. Ear buds and boom headsets that transmit mono sound through a wired connection.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Consumer and Professional Two-Way Radio Accessories.	Ninety (90) days from the date of purchase by the first consumer purchaser of the product.
Products and Accessories that are Repaired or Replaced.	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or

food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

Use of Non-Motorola Products and Accessories. Defects or damage that result from the use of non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

Software

Products Covered	Length of Coverage
Software. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	Ninety (90) days from the date of purchase.

Exclusions

Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

Software NOT Embodied in Physical Media. Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided "as is" and without warranty.

Who Is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or

parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

How to Obtain Warranty Service or Other Information

USA	Phones: 1-800-331-6456 Pagers: 1-800-548-9954 Two-Way Radios and Messaging Devices: 1-800-353-2729
Canada	All Products: 1-800-461-4575
TTY	1-888-390-6456
For Accessories and Software , please call the telephone number designated above for the product with which they are used.	

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE

PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.

Hearing Aid Compatibility with Mobile Phones

Some Motorola phones are measured for compatibility with hearing aids. If the box for your particular model has "Rated for Hearing Aids" printed on it, the following explanation applies.

When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone

successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or

"Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.

Information from the World Health Organization

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the

length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information: <http://www.who.int/peh-emf>

Product Registration

Online Product Registration:

www.motorola.com/us/productregistration

Product registration is an important step toward enjoying your new Motorola product. Registering permits us to contact you for product or software updates and allows you to subscribe to updates on new products or special promotions. Registration is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of

this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

Caring for the Environment by Recycling



This symbol on a Motorola product means the product should not be disposed of with household waste.

Disposal of your Mobile Device and Accessories

Please do not dispose of mobile devices or electrical accessories (such as chargers, headsets, or batteries) with your household waste. These items should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical

accessories to any Motorola Approved Service Center in your region. Details of Motorola approved national recycling schemes, and further information on Motorola recycling activities can be found at:

www.motorola.com/recycling

Disposal of your Mobile Device Packaging and User's Guide

Product packaging and user's guides should only be disposed of in accordance with national collection and recycling requirements. Please contact your regional authorities for more details.

California Perchlorate Label

Some mobile phones use an internal, permanent backup battery on the printed circuit board that may contain very small amounts of perchlorate. In such cases, California law requires the following label:

"Perchlorate Material – special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate."

There is no special handling required by consumers.

Privacy and Data Security

Motorola understands that privacy and data security are important to everyone. Because some features of your mobile device may affect your privacy or data security, please follow these recommendations to enhance protection of your information:

- **Monitor access**—Keep your mobile device with you and do not leave it where others may have unmonitored access. Lock your device's keypad where this feature is available.
- **Keep software up to date**—If Motorola or a software/application vendor releases a patch or software fix for your mobile device that updates the device's security, install it as soon as possible.
- **Erase before recycling**—Delete personal information or data from your mobile device prior to disposing of it or turning it in for recycling. For step-by-step instructions on how to delete all personal information from your device, see the

section entitled “master clear” or “delete data” in the user's guide.

Note: For information on backing up your mobile device data before erasing it, go to www.motorola.com and then navigate to the “downloads” section of the consumer Web page for “Motorola Backup” or “Motorola Phone Tools.”

- **Understanding AGPS**—To provide location information for emergency calls, certain Motorola mobile devices incorporate *Assisted Global Positioning System* (AGPS) technology. AGPS technology also can be used in non-emergency applications to track and monitor a user's location—for example, to provide driving directions. Users who prefer not to permit such tracking and monitoring should avoid using such applications.

If you have further questions regarding how the use of your mobile device may impact your privacy or data security, please contact Motorola at privacy@motorola.com, or contact your service provider.

Smart Practices While Driving

Drive Safe, Call Smart

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas -- for example, handsfree use only. Go to

www.motorola.com/callsmart (in English only) for more information.

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility.

If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.
- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today.
- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- **Do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.



- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.
- **Use your mobile device to call for help.** Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies.*
- **Use your mobile device to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.*
- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.*

* Wherever wireless phone service is available.

index

1X indicator 15, 16

3-way calling 39

911 indicator 16

A

accessories 10, 18

airplane mode indicator 16

alarm clock 62

alarm indicator 17

attach a number 37

audio file formats 48

B

backlight 30

banner 30

battery level indicator 17

battery life, extend 12

battery, conserving 11

Bluetooth active indicator 17

Bluetooth connected indicator 17

Bluetooth connections

 connect during call 67

Bluetooth on indicator 17

brightness 30

browser 55

C

cables 64

calculator 62

call timers 34

call times 39

camera 52

car kit 18

center select key 2

clock 30

 world 62

codes 19, 22

conserve battery 11

contacts 37, 58

 add entries to group 60

 call 58

 create group 60

 edit 58

 picture ID 59

 primary number 59

 ringer ID 59

 sort entries 60

 view contact 58

D

data call indicator 16

dialed calls 34

digital indicator 15

display brightness 30

dormant indicator 16
drafts folder 46
DTMF tones 39

E

emergency number 35
end key 2
export regulations 83

G

group
 add entries 60
 create 60

H

handsfree speaker 18
headset 18
hearing aid 38
home screen
 banner 30

I

international access code 37

K

key volume 29
keypad locked indicator 16

L

location on indicator 16
lock phone 19

M

menu
 language 30
message
 alerts 29
 delete 46
 drafts 46
 quick text 45

 store message objects 45, 46
 view sent message 45
message indicator 17
minute beep 39
Missed Calls message 34
music player
 audio file formats 48
 get music 47

N

navigation key 2, 10
network
 adjust settings 61
 call connect tones 61
 call drop tone 61
no service indicator 16
notepad 63
number. See phone number

O

- optional accessory 10
- optional feature 10

P

- phone number 26
- picture ID 59
- power key 2

Q

- Quick Find 28
- quick text 45

R

- radio 50
- received calls 34
- recent calls 34
- redial 27, 33
- return a call 34
- ringer ID 59

- roaming indicator 16

S

- safety tips 84
- security code 22
- send key 2
- signal strength indicator 15
- sounds off (silent) indicator 17
- sounds soft indicator 17
- speakerphone 18
- speakerphone indicator 17
- SSL indicator 16
- status indicators 15
- store your number 26

T

- telephone number. See phone number
- TELUS mobile music. See music player
- TELUS mobile radio 50

- text entry 40
- timers 34
- TTY indicator 16

U

- unanswered call indicator 17
- unlock code 19, 22
- unlock phone 19
- USB cables 64

V

- vibrate on indicator 17
- video 52
- voice call indicator 17
- voice note 56
 - play 56
- voice recognition 57
- voicemail 44
- voicemail message indicator 44
- volume key 29

W

warranty 78

world clock 62

X

XM Satellite Radio 50

Y

your phone number 26

U.S. patent Re. 34,976

www.motorola.com

